



Removal


- 1 Open sun roof.
- 2 Remove chrome plated rail at front of opening.

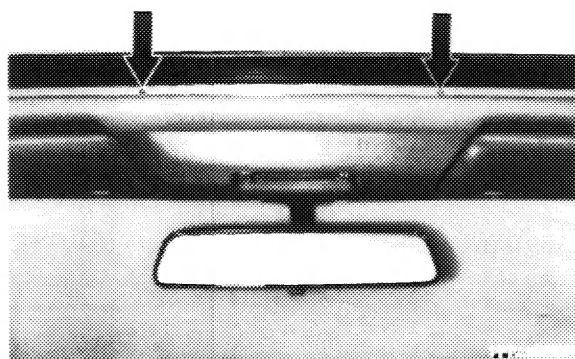

- 3 Remove left and right sliding rails.

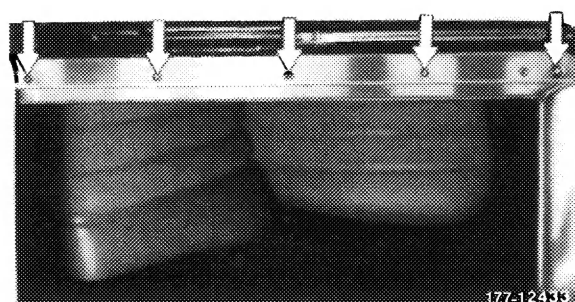


- 4 Unclip rear holder and pull it back out of wind deflector.
- 5 Use hand to first pull out wind deflector at center together with center holder.

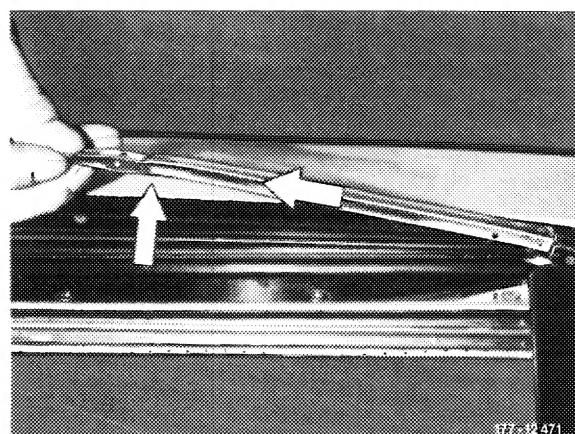

6 Press down wind deflector and at the same time use a screwdriver to press the left and then the right holder out of the recess carefully.

7 Remove wind deflector toward rear.

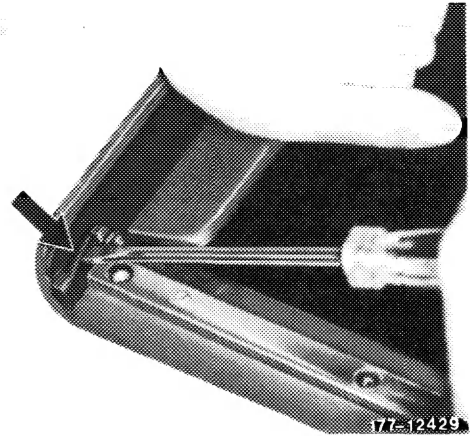

Installation

8 Insert wind deflector in opening and knock in left and right holders with a slight knock from palm of hand. Make sure that center holder also engages properly.

9 Secure left and right holders and clips.

10 Install chrome plated rail at front of opening as well as left and right sliding rails.

Adjusting

11 If the wind deflector scrapes in the sun roof opening when running out or in, the height can be corrected with the adjusting screw accordingly.

Note: If wind deflector rattles at center holder, the deflector is held by a second man at the outer holders, while it is pulled out in the center area of the center holder and bent up a little. This amount of pre-load will prevent rattling.

